



Volume Drop D15

780220

Installation Quick Sheet



Measurements:

- Height = 460 mm [18.11 in]
- Width = 150 mm [5.91 in]
- Depth = 200 mm [7.87 in]
- Dispenser Capacity = 6 L [.212 ft³]
= 3.8 kg [8.4 lb] (40 lb/ft³ feed density)

Design Features:

- Easy to assemble, install, and handle.
- Precise and easy to regulate using a medication scale in kg or L.
- Made of high quality transparent plastic for visual control.
- Manufactured in two pieces to optimize transportation.

D15 includes:

- Clip for animal control technical sheet.
- Medication lid with tab to facilitate opening.
- Opening and closing braided stainless steel cable with guide wheels to install the dispenser according to the farm's automatic feeding line.
- Ball to open and close the feed distribution as needed.

Parts List



Bracket
(for wire)



Ring



Cover



Gate




Clamp




Spring




Ball
(with SST flex cable)

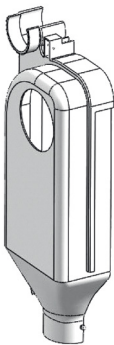

Body (Left Side)

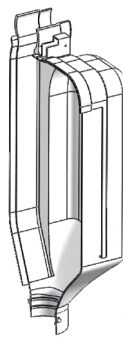



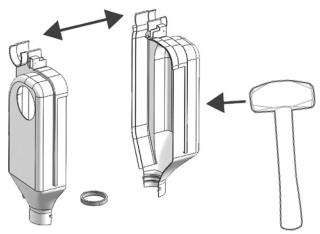

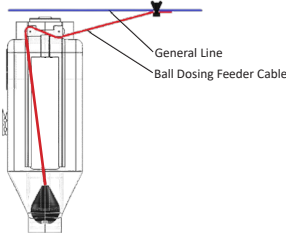


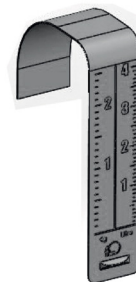





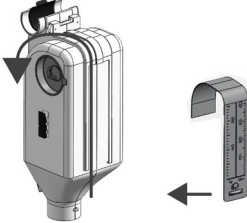


Body (Right Side)

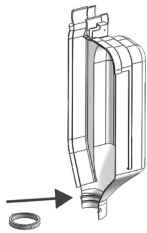

Slide Rule

Assembly
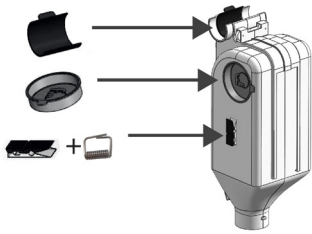
<p>1  Ring  Body (<i>Right Side</i>)</p> <p>Place the ring in the bottom of the body, as shown. The ring has a slanted side, which should be towards the inside of the body.</p>	
<p>2  Body (<i>Left Side</i>)</p> <p>Join the two parts of the body together, with the ring in the indicated position, as shown. Make sure all the PVC springs make a clicking sound, indicating the body has been closed correctly. NOTE: A light blow with a hammer ensures that the two parts of the dispenser do not open.</p>	
<p>3  Ball</p> <p>Insert the ball through the side hole. Remove the SST flexible cable through one of the small openings in the top of the body, passing the cable through the two outer pulleys, as shown. It is important to avoid contact between cable and sharps that can damage cable with repetitive movements.</p>	 <p>General Line Ball Dosing Feeder Cable</p>
<p>4  Bracket (<i>for wire</i>)</p> <p>Assemble the bracket and insert the SST flexible cable through it.</p>	
<p>5  Gate  Cover  Clamp  Spring</p> <p>Assemble the clamp, cover, and gate, as shown.</p>	
<p>6  Slide Rule</p> <p>Insert the slide rule through the outer slots of the dispenser. The slide rule must be fully inserted.</p>	

North America:

Phone: 800.99VALCO; 800.998.2526

Fax: 419.678.2200

Email: sales@val-co.com

990341

REV [-]

International:

Phone: (+1) 419.678.8731

Fax: (+1) 419.678.2200

Email: intl.sales@val-co.com