




Ventium Whole House Controls

PA-48-VENTIUM, PA-49-VENTIUM, PA-50-VENTIUM,
PA-51-VENTIUM, PA-53-VENTIUM, PA-62-VENTIUM

Repair Parts Lists


PA-48-VENTIUM (Ventium Output Module, Model 300) - Exploded View

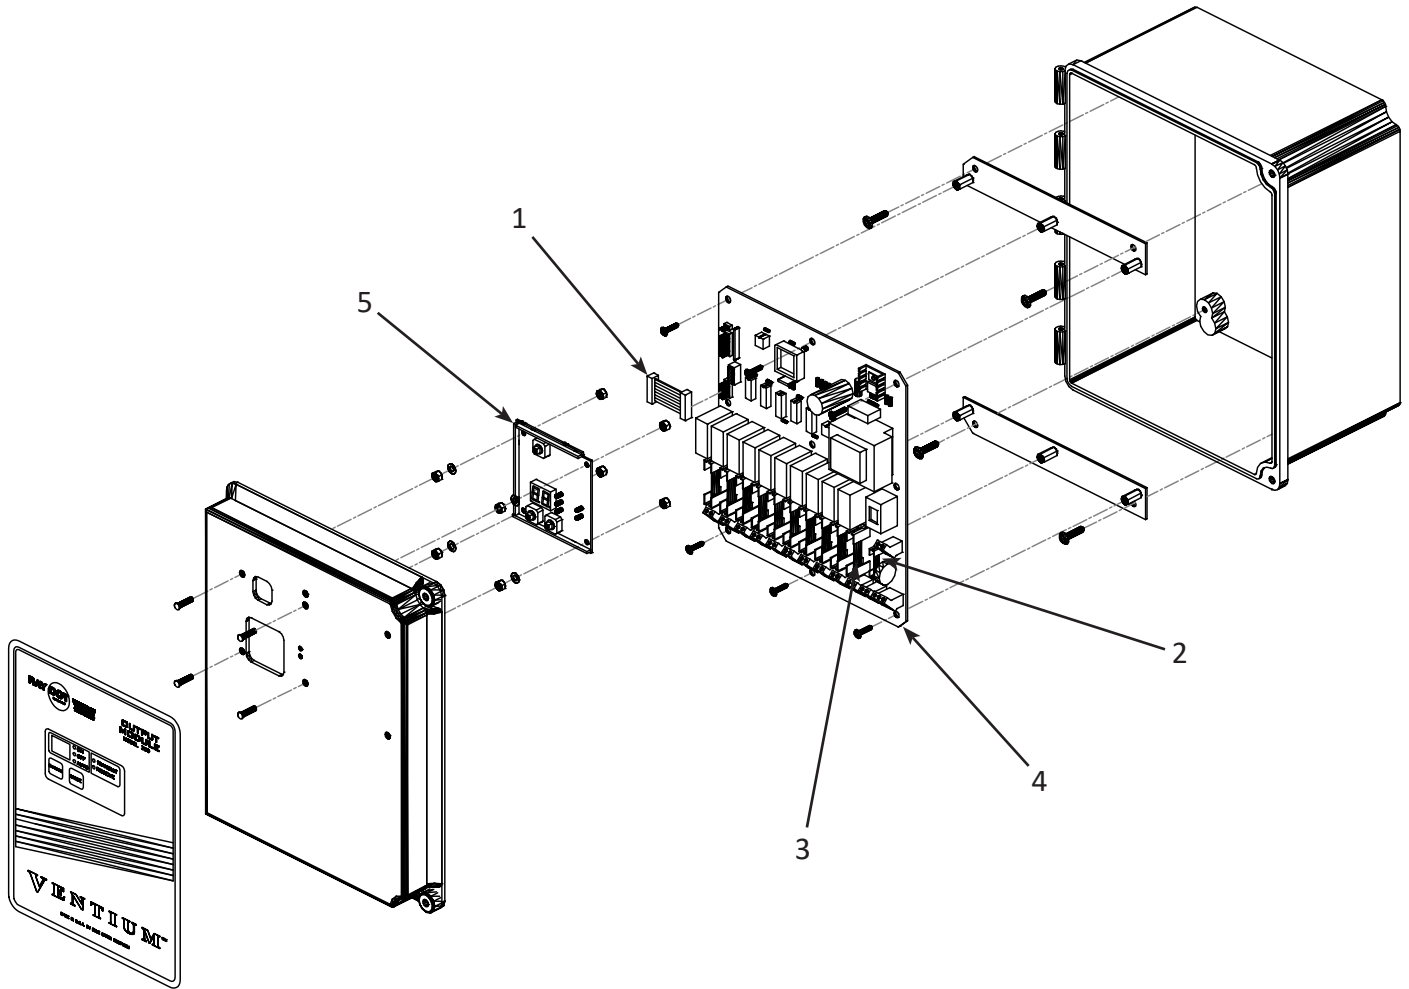

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-48-VENTIUM (VENTIUM OUTPUT MODULE, MODEL 300) - REPAIR PARTS LIST			
1	CA-22	RIBBON CABLE	ACTIVE
2	FS-11	FUSE, SLOBLO, .125 AMP, 5X20mm	OBSOLETE - NO REPLACEMENT
3	FS-14	FUSE, SLOBLO, 3AB, 15 AMP	OBSOLETE - NO REPLACEMENT
4	PA-48-001	OUTPUT BOARD	OBSOLETE - NO REPLACEMENT
5	PA-54	KEYPAD CIRCUIT BOARD	ACTIVE

Please contact Customer Service (page 6) for alternate options to obsolete components.


PA-49-VENTIUM (Ventium Multi Module, Model 500) - Exploded View

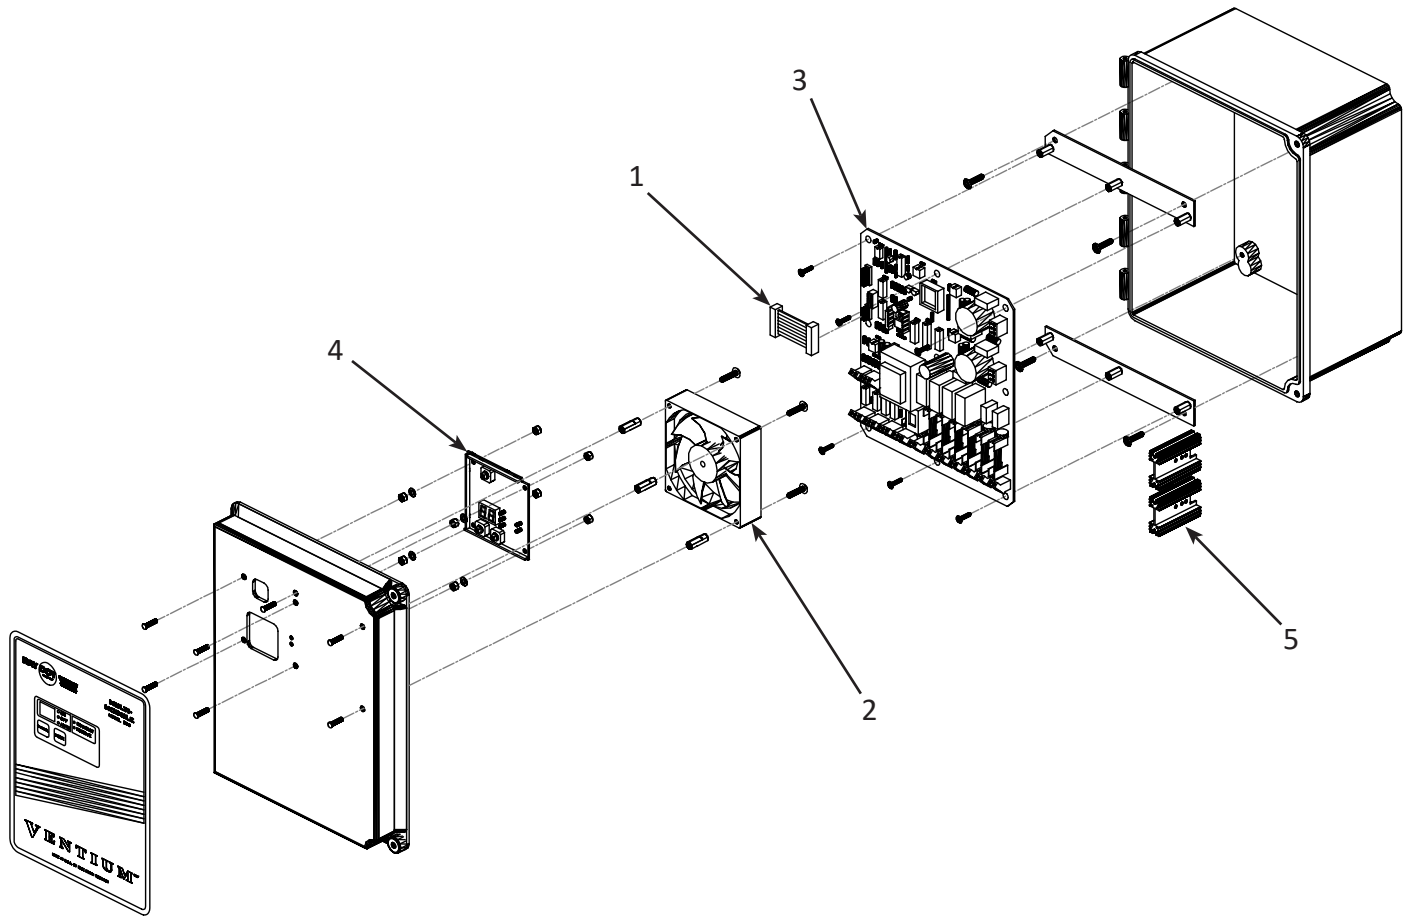

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-49-VENTIUM (VENTIUM MULTI MODULE, MODEL 500) - REPAIR PARTS LIST			
1	CA-22	RIBBON CABLE	ACTIVE
2	FN-01	FAN ASSEMBLY	ACTIVE
3	PA-49-001	INPUT / OUTPUT BOARD	OBSOLETE - NO REPLACEMENT
4	PA-54	KEYPAD CIRCUIT BOARD	ACTIVE
5	TR-10-HS	ALTERNISTOR, Q6040K7, W/ HEATSINK	OBSOLETE - NO REPLACEMENT

Please contact Customer Service (page 6) for alternate options to obsolete components.


PA-50-VENTIUM (Ventium Input Module, Model 200) - Exploded View

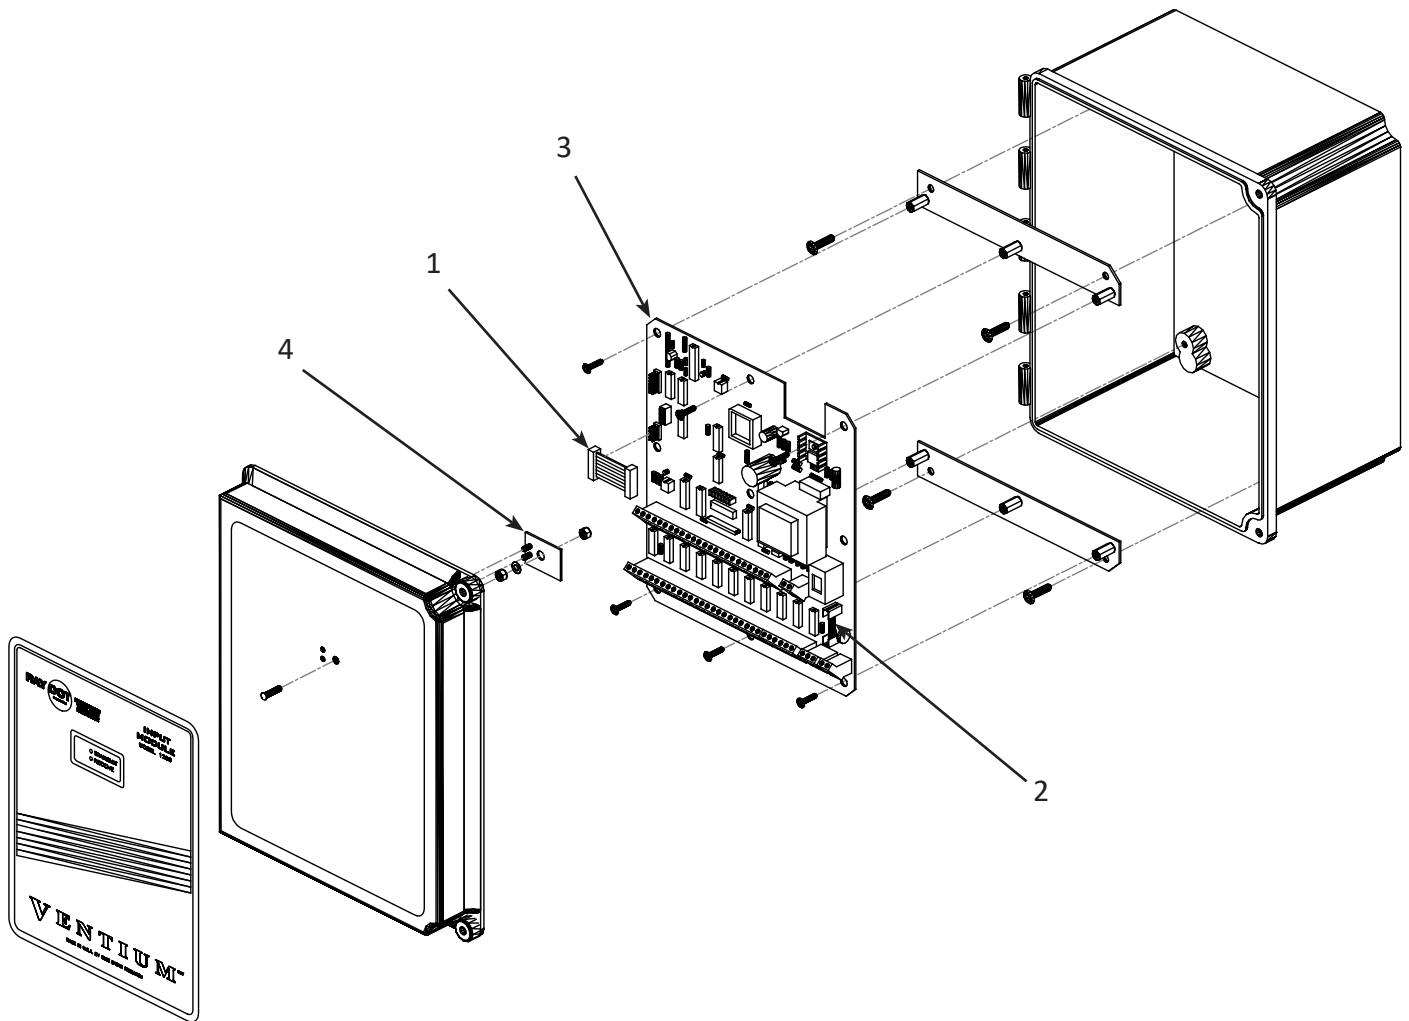

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-50-VENTIUM (VENTIUM INPUT MODULE, MODEL 200) - REPAIR PARTS LIST			
1	CA-22	RIBBON CABLE	ACTIVE
2	FS-11	FUSE, SLOBLO, .125 AMP, 5X20mm	OBSOLETE - NO REPLACEMENT
3	PA-50-001	MAIN INPUT BOARD	OBSOLETE - NO REPLACEMENT
4	PA-54-INPUT	INPUT LED BOARD	OBSOLETE - NO REPLACEMENT

Please contact Customer Service (page 6) for alternate options to obsolete components.


PA-51-VENTIUM (Ventium Control Center, Model 100) - Exploded View

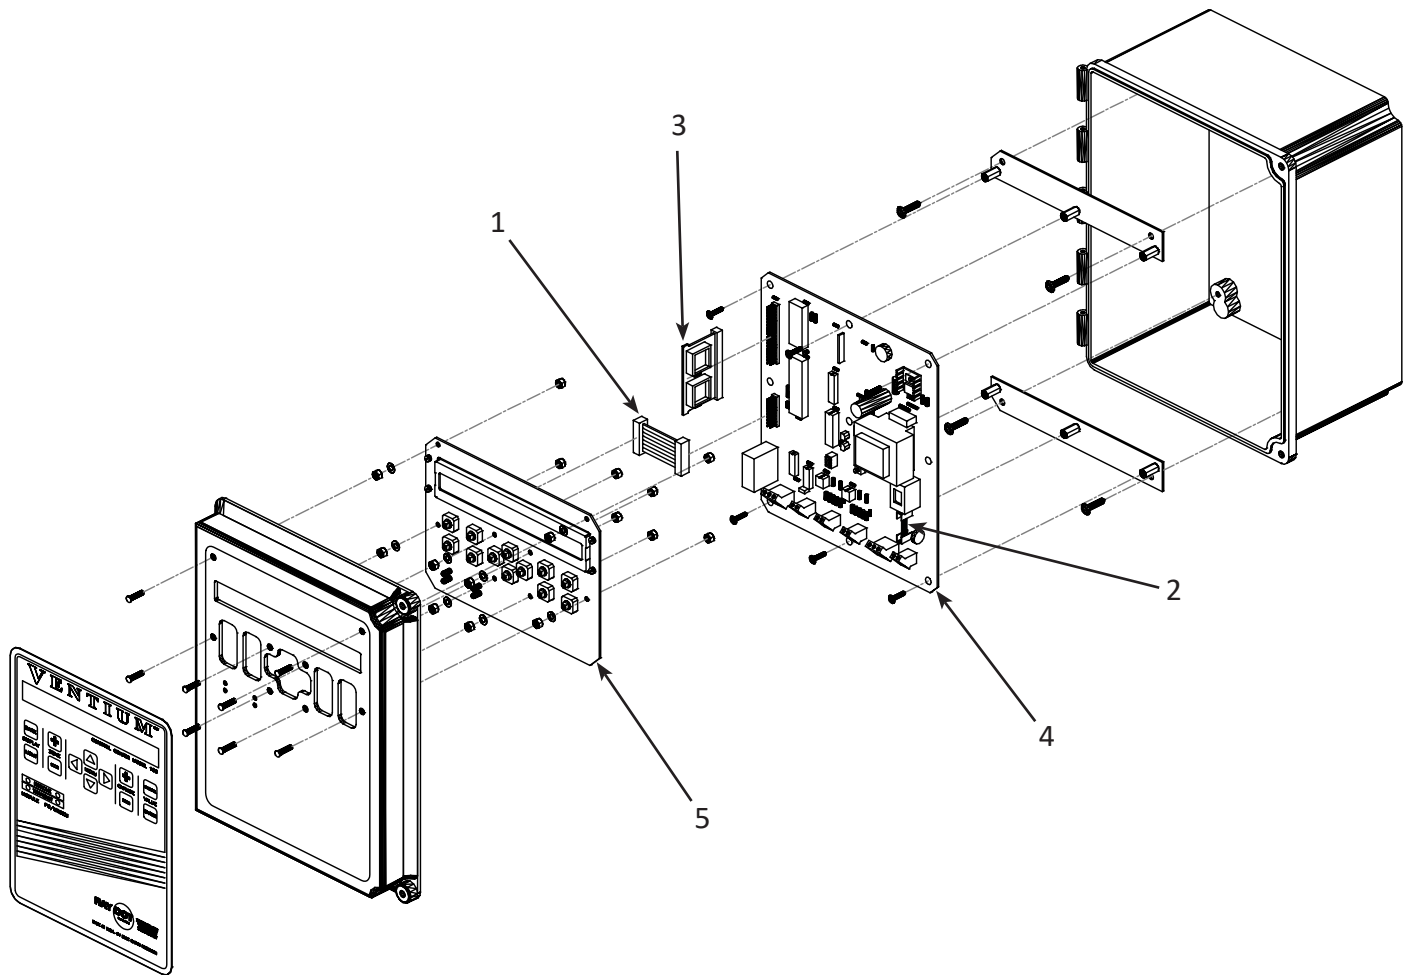

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-51-VENTIUM (VENTIUM CONTROL CENTER, MODEL 100) - REPAIR PARTS LIST			
1	CA-23	RIBBON CABLE	ACTIVE
2	FS-11	FUSE, SLOBLO, .125 AMP, 5X20mm	OBSOLETE - NO REPLACEMENT
3	PA-067-401	MEMORY CARD W/ VENTIUM PROGRAM	ACTIVE
4	PA-51-001	MAIN CONTROL BOARD	OBSOLETE - NO REPLACEMENT
5	PA-52	KEYPAD CIRCUIT BOARD	OBSOLETE - NO REPLACEMENT

Please contact Customer Service (page 6) for alternate options to obsolete components.


PA-53-VENTIUM (Ventium Variable Module, Model 400) - Exploded View

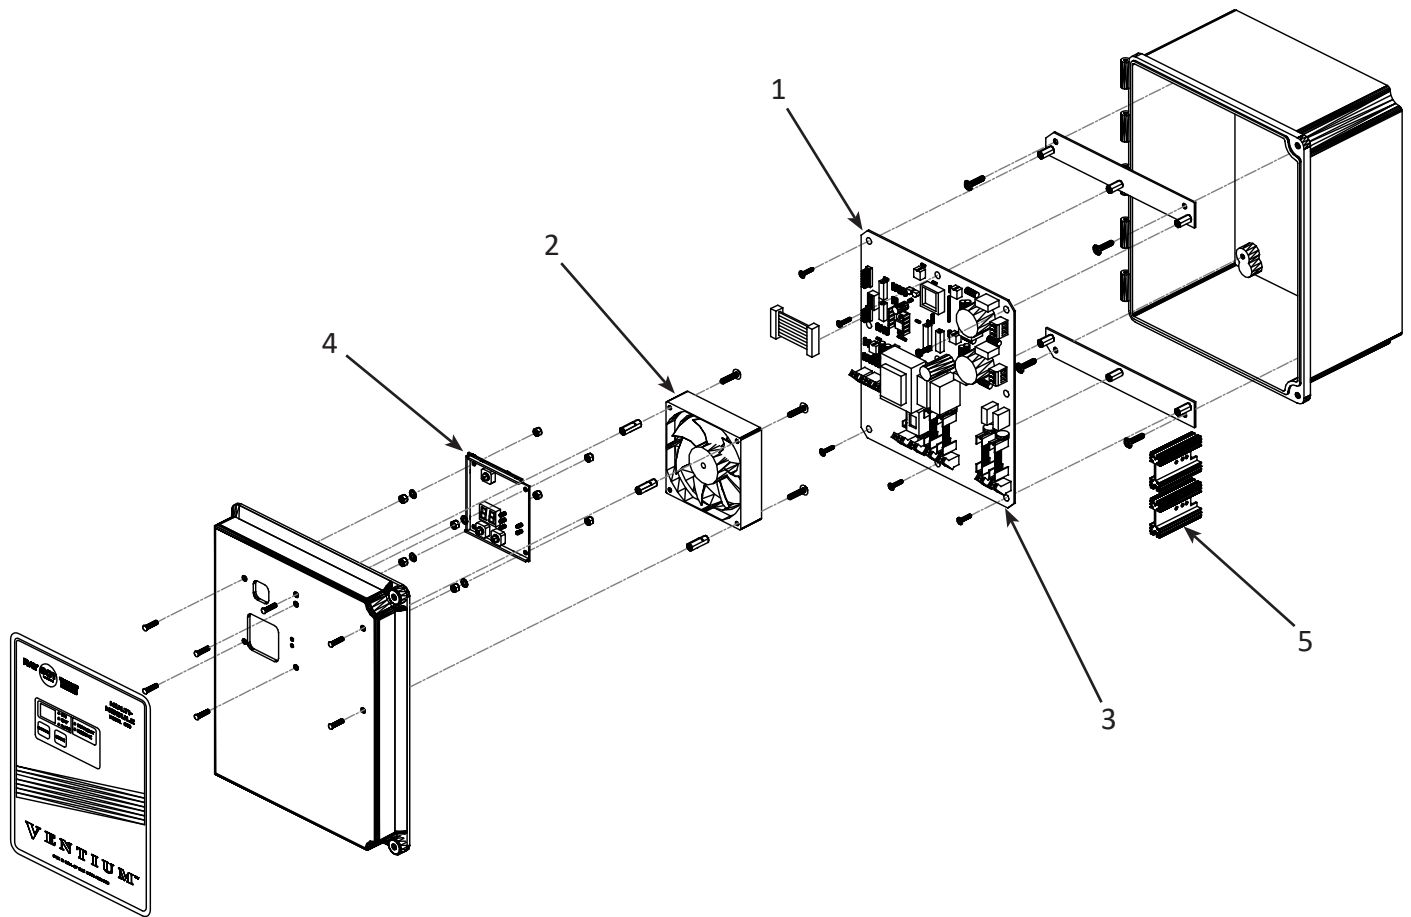

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-53-VENTIUM (VENTIUM VARIABLE MODULE, MODEL 400) - REPAIR PARTS LIST			
1	CA-22	RIBBON CABLE	ACTIVE
2	FN-01	FAN ASSEMBLY	ACTIVE
3	PA-53-001	INPUT / OUTPUT VARIABLE SPEED BOARD	OBSOLETE - NO REPLACEMENT
4	PA-54	KEYPAD CIRCUIT BOARD	ACTIVE
5	TR-10-HS	ALTERNISTOR, Q6040K7, W/ HEATSINK	OBSOLETE - NO REPLACEMENT

Please contact Customer Service (page 6) for alternate options to obsolete components.

PA-62-VENTIUM (Ventium Base Module, Model 600) - Exploded View

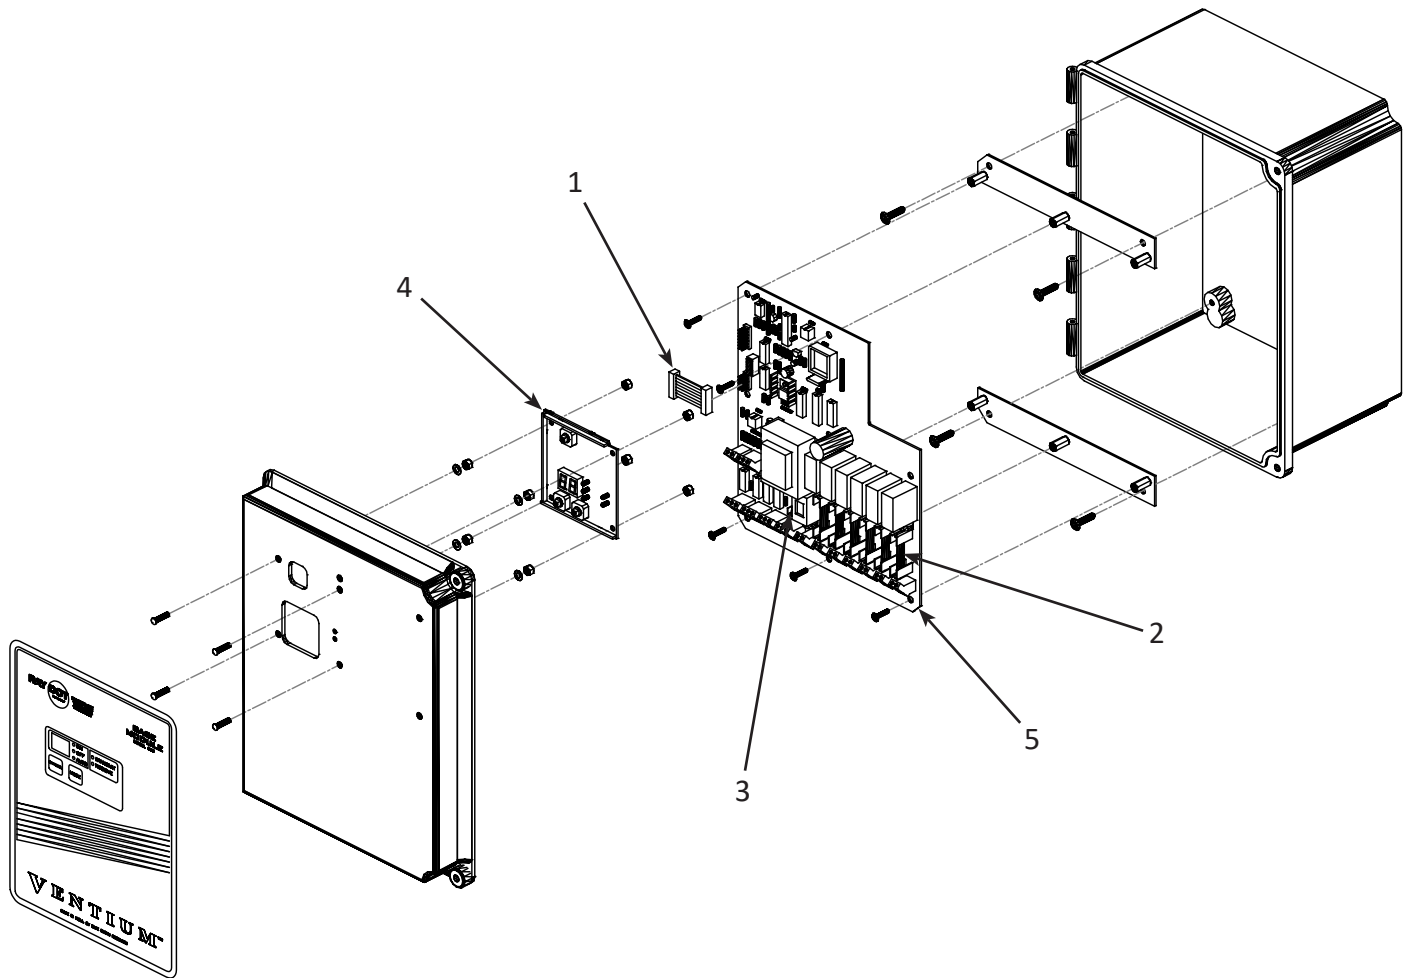

KEY	PART #	DESCRIPTION	AVAILABILITY
PA-62-VENTIUM (VENTIUM BASE MODULE, MODEL 600) - REPAIR PARTS LIST			
1	CA-22	RIBBON CABLE	ACTIVE
2	FS-11	FUSE, SLOBLO, .125 AMP, 5X20mm	OBSOLETE - NO REPLACEMENT
3	FS-14	FUSE, SLOBLO, 3AB, 15 AMP	OBSOLETE - NO REPLACEMENT
4	PA-54	KEYPAD CIRCUIT BOARD	ACTIVE
5	PA-62-001	INPUT / OUTPUT BOARD	OBSOLETE - NO REPLACEMENT

Please contact Customer Service for alternate options to obsolete components.

Customer Service

North America:

Phone: 800.99VALCO; 800.998.2526

Fax: 419.678.2200

Email: sales@val-co.com

990191-RP (Ventium Repair Parts) REV1



International:

Phone: (+1) 419.678.8731

Fax: (+1) 419.678.2200

Email: intl.sales@val-co.com

©2019 Valco Companies, Inc.