





Quick Sheet Instructions

631811: KIT, COUPLER, 1.25" DIA PIPE

Installation Instructions:

1. Slide coupler inside of tube, and line holes in tube up with holes in coupler.
2. Insert bolt and tighten nylock nuts.

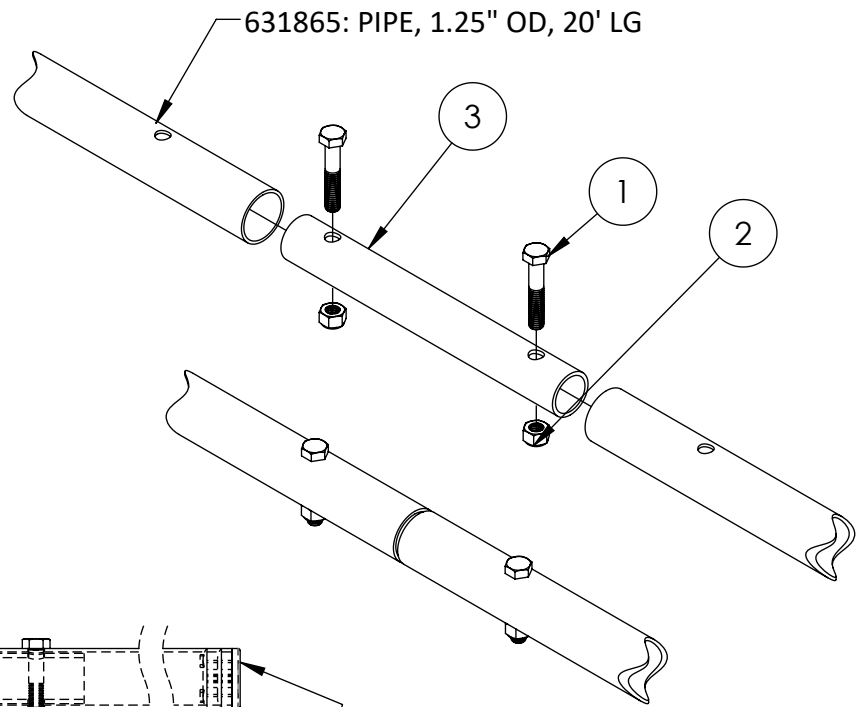

Tube ends should have a gap of approximately 1/8", as shown

631812: PIPE PLUG
(Sold Separately)

BILL OF MATERIALS, PER ONE COUPLER

ITEM #	PART #	QTY	DESCRIPTION
1	010649	2	BOLT, HEX, 5/16-18 X 1-3/4"
2	012789	2	5/16-18 NYLOCK NUT
3	631810	1	PIPE, 1.05" OD, 8" LG, W/ HOLES