




Quick Sheet Instructions


NEST PAD ASSEMBLY

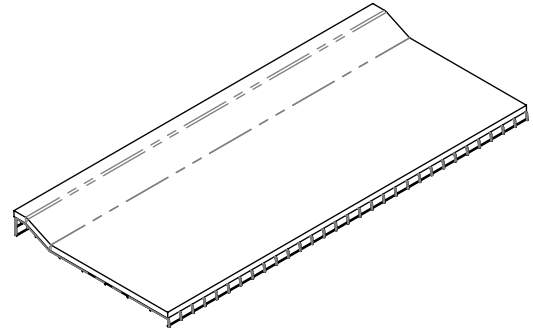

Installation Instructions:

Pre-assemble each floor pad (631423) to a wire support panel (630004) using (6) cable ties (012800), as shown in Figures 1 and 2. Cable Ties fit through holes on underside of floor pad. Arrange cable ties into two rows, starting approximately 4" (10cm) from the edges of the floor pad, locating the remaining ties in the center. Floor pad and wire panel are shown from the bottom side for clarity in Figure 1. **Floor pads MUST be attached, otherwise expeller panel may dislodge pads during expeller drive unit operation.**

Figure 1 - Bottom View

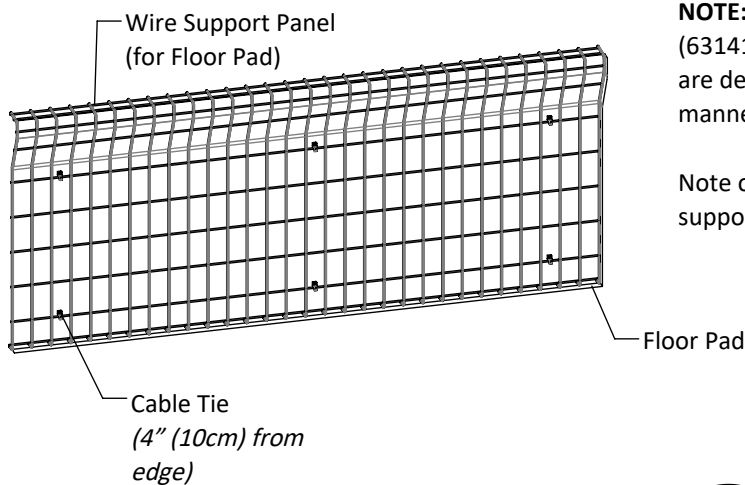

NOTE: Extended back assemblies (631577) also have nest pads (631413) that must be attached. The backs have (5) slots that are designed to be used to attach the floor pads in the same manner, using (5) cable ties (012800).

Note orientation of cable ties in relation to wires in wire support panel. (*Floor pad shown in simplified state for clarity.*)

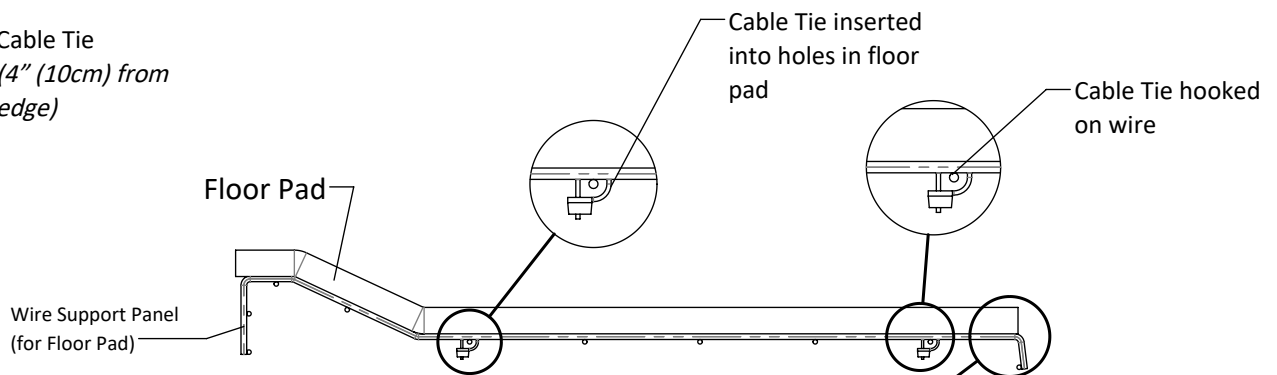


Figure 2 - Side View

