



# Quick Sheet Instructions


630220 & 630221 24" x 60" Slat Installation

## Installation Instructions:



## WARNING

1. Create frame work as shown in the below picture. The frame material must be strong enough to properly support the load, including personnel, being applied onto the flooring. The No.3 items are to be in lengths equal to the number of slats x 24" (60.9cm). The No.3 items are to be placed on 19-7/8" (50.5cm) centers.
  2. Fasten slats down using #10 x 2-1/2" zinc plated countersink screws with minimum a quantity of (12) screws as shown below.
- Poultry flooring is designed to support the weight of chickens. Workers must walk only on supported areas of the flooring.
  - Care must be taken to prevent impact loading of the flooring slats. Impact loading includes the dropping of objects and bouncing of personnel weight.
  - If a hard object >10 lbs. (4.5 kg) is dropped onto a slat, the slat must be replaced (internal damage may have occurred which may or may not be visible).
  - Any broken slats must be replaced immediately.

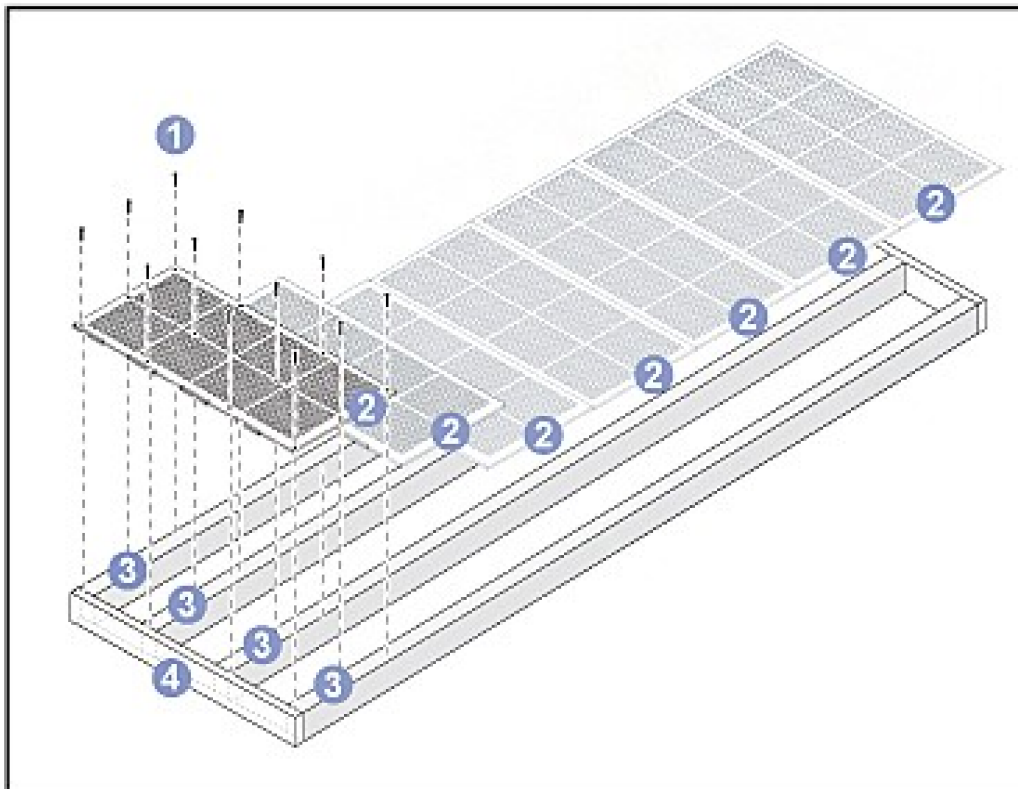

### North America:

Phone: 800.99VALCO (800.998.2526)  
Fax: 419.678.2200  
Email: sales@val-co.com

990369 [A] 7/3/2025  
Page 1

### International:

Phone: (+1)419.678.8731  
Fax: (+1)419.678.2200  
Email: Intl.sales@val-co.com