

Manual Flush End Assembly

Installation Quick Sheet

Conduit Installation

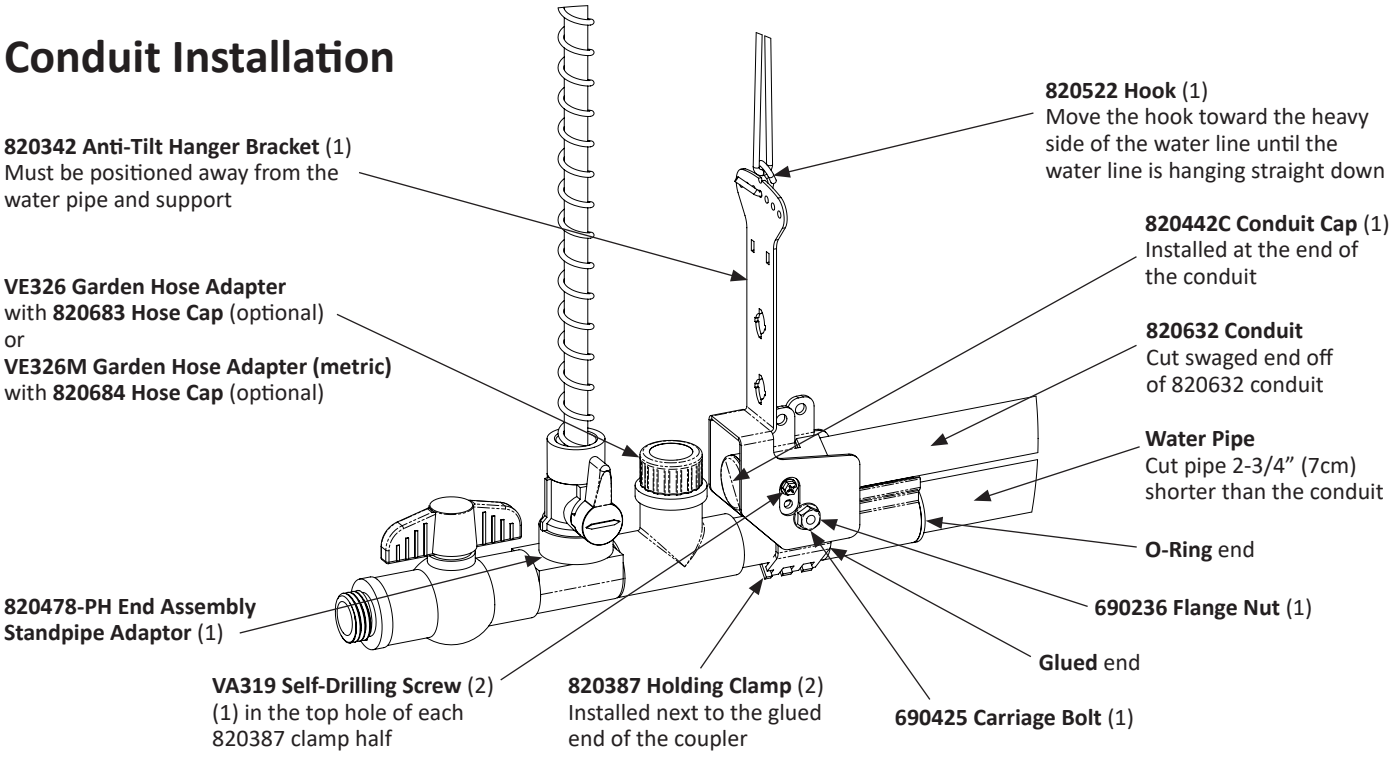

Aluminum Installation

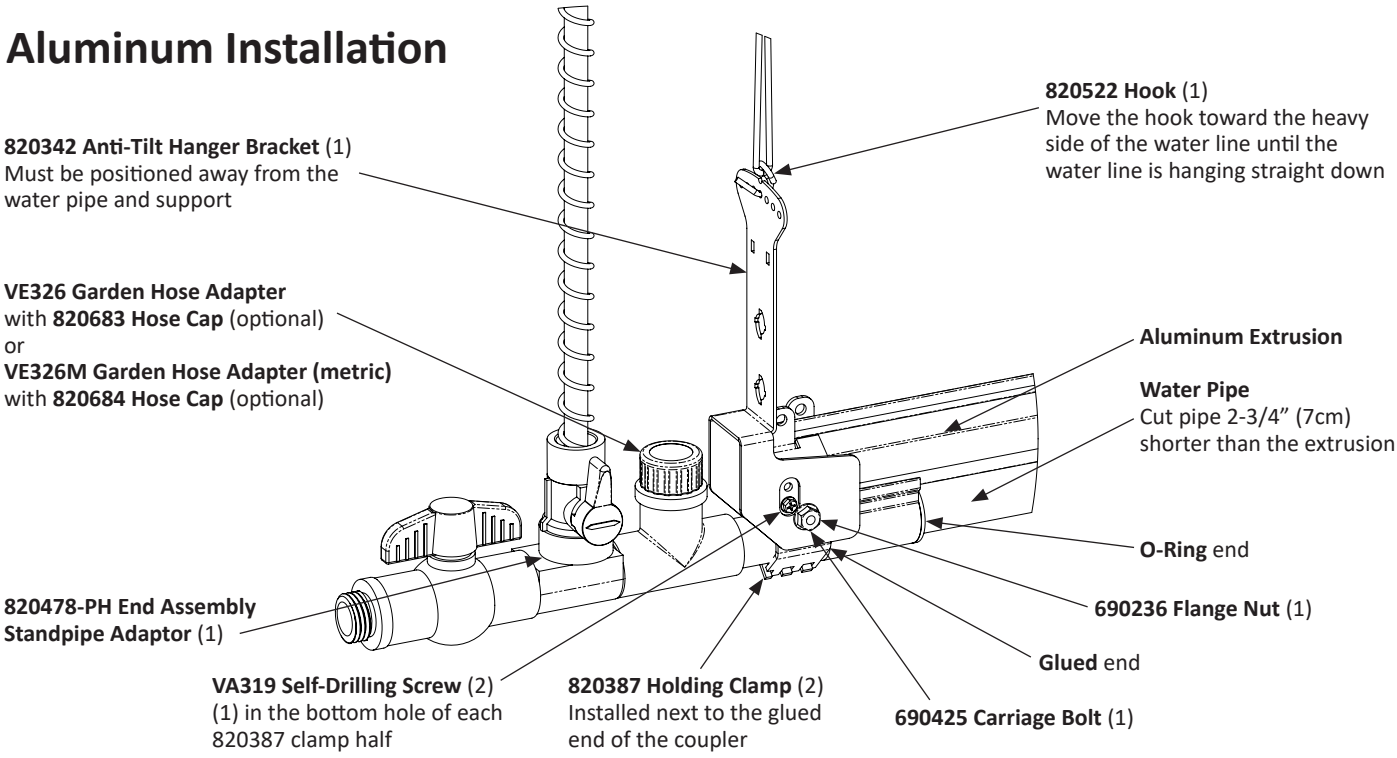


990253
REV [G]

©2026 Valco Industries, Inc.

Installation Notes:

- 820632 conduit must have the swaged end cut off to install the 820442C cap.
- The water pipe must be cut 2-3/4” (7cm) shorter than the conduit or aluminum extrusion.
- The holding clamps 820387 must be installed against the glued end of the coupler.
- For conduit support use (1) VA319 self-drilling screw in the top hole of each 820387 clamp half.
- For aluminum support use (1) VA319 self-drilling screw in the bottom hole of each 820387 clamp half.

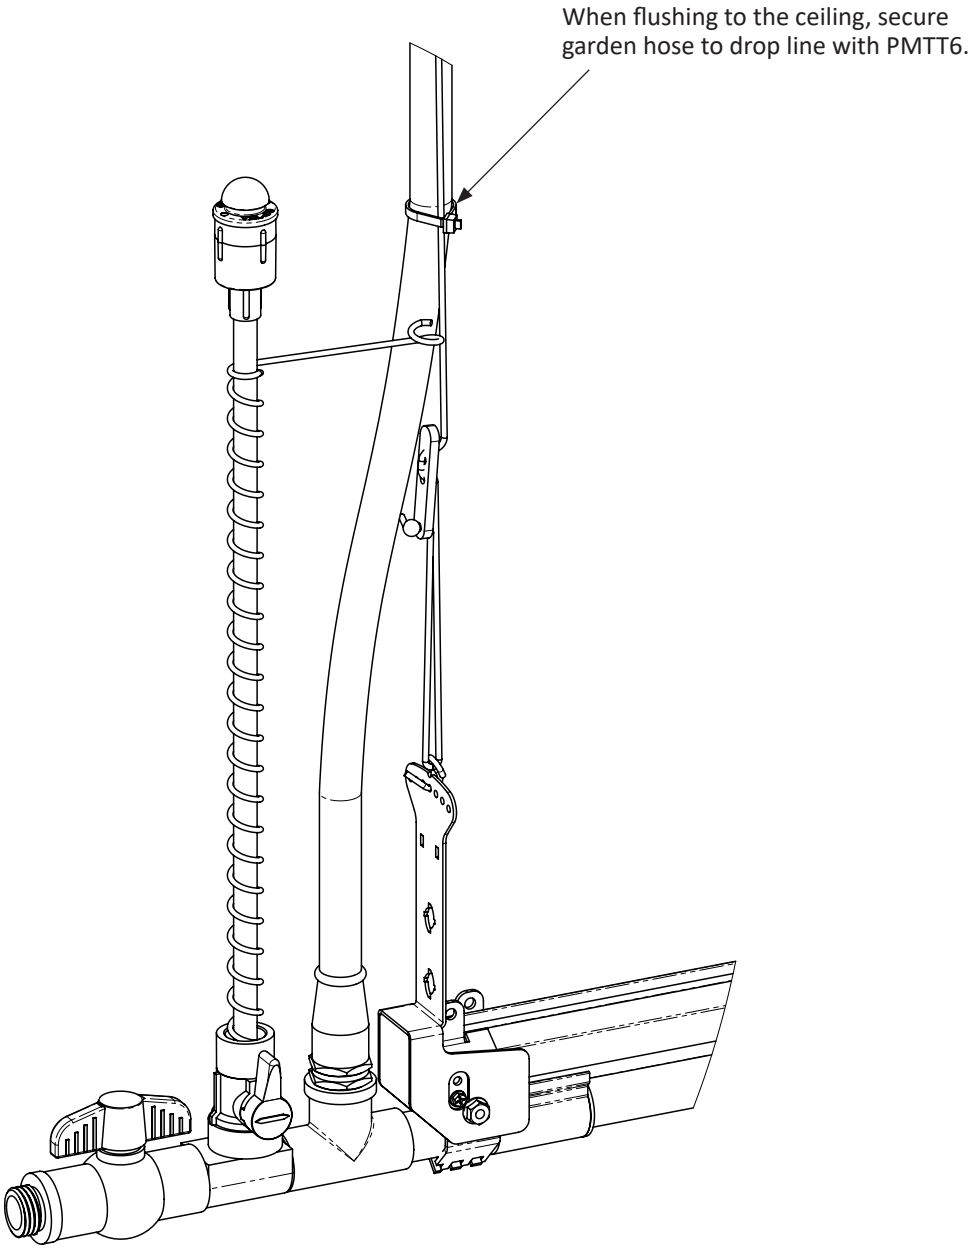

North America:
Phone: 800.99VALCO; 800.998.2526
Fax: 419.678.2200
Email: sales@val-co.com

International:
Phone: (+1) 419.678.8731
Fax: (+1) 419.678.2200
Email: intl.sales@val-co.com