



Manual Flush End Assembly w/o Bracket

Installation Quick Sheet

Conduit Installation

820442C Conduit Cap (1)
Installed at the end of the conduit

VE326 Garden Hose Adapter with **820683 Hose Cap** (optional)
or
VE326M Garden Hose Adapter (metric) with **820684 Hose Cap** (optional)

820478-PH End Assembly Standpipe Adaptor (1)

VA319 Self-Drilling Screw (2)
(1) in the top hole of each 820387 clamp half

820387 Holding Clamp (2)
Installed next to the glued end of the coupler

820522 Hook (1)
Hook onto 820387 holding clamp

Conduit

Water Pipe
cut pipe 2-3/4" (7cm) shorter than the conduit

O-Ring end

690236 Flange Nut (1)

690425 Carriage Bolt (1)

Glued end

Aluminum Installation

VE326 Garden Hose Adapter with **820683 Hose Cap** (optional)
or
VE326M Garden Hose Adapter (metric) with **820684 Hose Cap** (optional)

820478-PH End Assembly Standpipe Adaptor (1)

VA319 Self-Drilling Screw (2)
(1) in the bottom hole of each 820387 clamp half

820387 Holding Clamp (2)
Installed next to the glued end of the coupler

820522 Hook (1)
Hook onto 820387 holding clamp

Aluminum Extrusion

Water Pipe
cut pipe 2-3/4" (7cm) shorter than the extrusion

O-Ring end


690236 Flange Nut (1)

690425 Carriage Bolt (1)

Glued end

Installation Notes:

- The water pipe must be cut 2-3/4" (7cm) shorter than the conduit or aluminum extrusion.
- The holding clamps 820387 must be installed against the glued end of the coupler.
- For conduit support use (1) VA319 self-drilling screw in the top hole of each 820387 clamp half.
- For aluminum support use (1) VA319 self-drilling screw in the bottom hole of each 820387 clamp half.

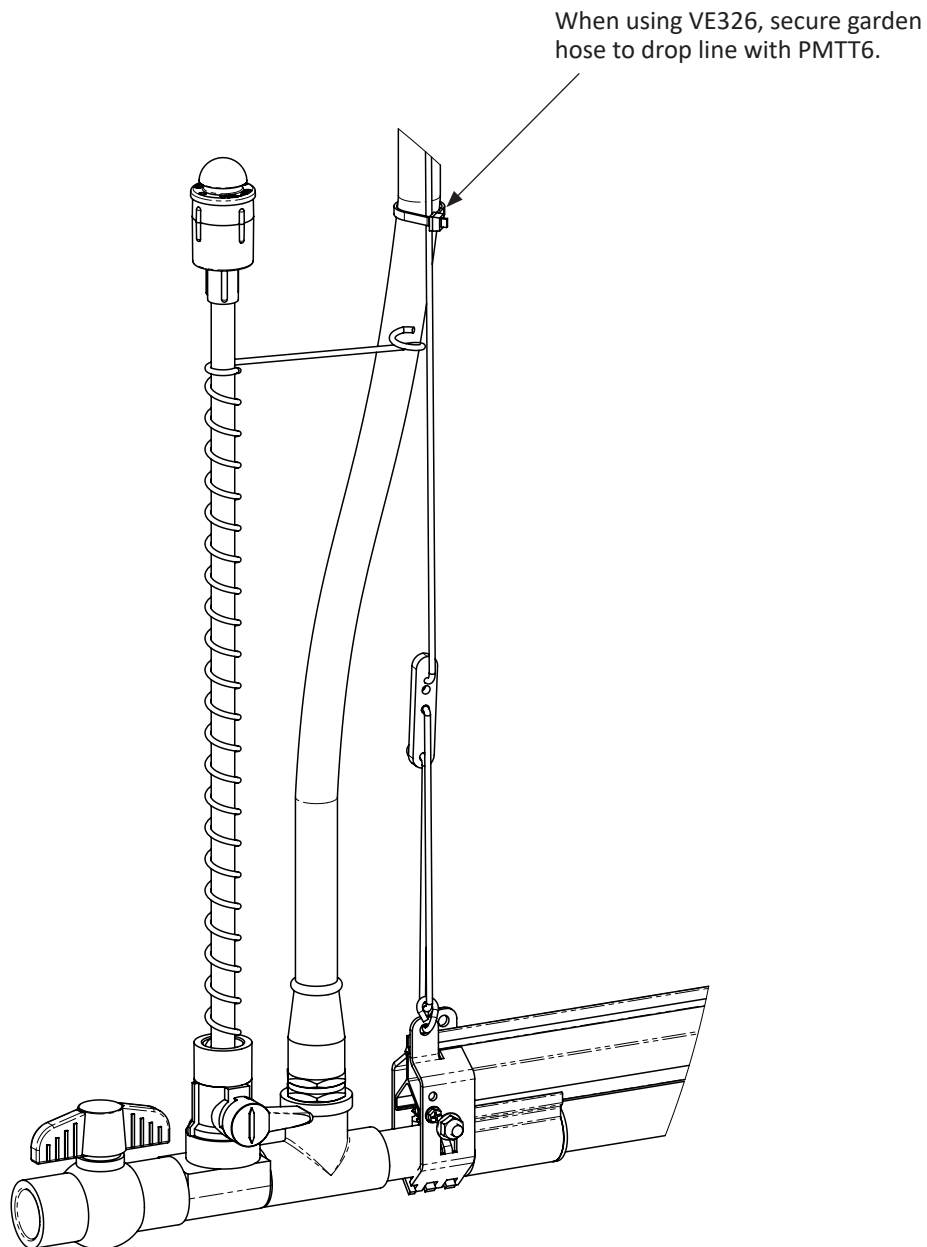

North America:

Phone: 800.99VALCO; 800.998.2526

Fax: 419.678.2200

Email: sales@val-co.com

990298

REV [B]

International:

Phone: (+1) 419.678.8731

Fax: (+1) 419.678.2200

Email: intl.sales@val-co.com